

## Human Amyloid Beta Peptide 1-40 (Ab1-40) ELISA Kit

**Catalog No.:** abx150496

**Size:** 96T

**Range:** 12.35 pg/ml - 1000 pg/ml

**Sensitivity:** < 4.58 pg/ml

**Storage:** Store standard, detection reagent A, detection reagent B and the 96-well plate at -20°C, and the rest of the kit components at 4°C.

**Application:** For quantitative detection of Ab1-40 in Human Serum, Plasma and other biological fluids.

**Introduction:** Amyloid beta (A $\beta$  or Abeta) denotes peptides of 36–43 amino acids that are crucially involved in Alzheimer's disease as the main component of the amyloid plaques found in the brains of Alzheimer patients. The peptides derive from the amyloid precursor protein (APP), which is cleaved by beta secretase and gamma secretase to yield A $\beta$ . A $\beta$  molecules can aggregate to form flexible soluble oligomers which may exist in several forms. It is now believed that certain misfolded oligomers can induce other A $\beta$  molecules to also take the misfolded oligomeric form, leading to a chain reaction akin to a prion infection. The oligomers are toxic to nerve cells. The other protein implicated in Alzheimer's disease, tau protein, also forms such prion-like misfolded oligomers, and there is some evidence that misfolded A $\beta$  can induce tau to misfold.

### Principle of the Assay

This kit is based on a competitive binding enzyme-linked immuno-sorbent assay technology. An antibody specific to Ab1-40 is pre-coated onto the 96 well plate. A competitive inhibition reaction is launched between biotin labeled Ab1-40 and unlabeled Ab1-40 with the pre-coated antibody specific to Ab1-40. After washing away the unbound conjugates, avidin conjugated to Horseradish Peroxidase is added to each microplate well and incubated. After TMB substrate solution is added only wells that contain Ab1-40 will produce a blue color product that changes into yellow after adding acidic stop solution. The intensity of the color yellow is inverse proportional to the Ab1-40 amount bound on the plate. The O.D. absorbance is measured spectrophotometrically at 450 nm in a microplate reader, and then the concentration of Ab1-40 can be calculated.

### Kit components

1. One pre-coated 96-well microplate (12 × 8 well strips)
2. Standard: 2 tubes
3. Standard Diluent Buffer: 20 ml
4. Wash Buffer (30X): 20 ml. Dilution: 1:30
5. Diluent A: 12 ml
6. Diluent B: 12 ml
7. Stop solution: 6 ml
8. TMB substrate : 9 ml
9. Detection Reagent A: 1 tube
10. Detection Reagent B (100X): 120  $\mu$ l
11. Plate sealer: 4
12. Reagent Diluent: 300  $\mu$ l

### Material Required But Not Provided

1. 37°C incubator
2. Microplate reader (wavelength: 450 nm)
3. High-precision pipette and sterile pipette tips
4. Automated plate washer
5. ELISA shaker
6. Tubes to prepare standard or sample dilutions
7. Deionized or distilled water
8. Absorbent filter papers
9. 100 ml and 1 liter graduated cylinders

## Protocol

### A. Preparation of sample and reagents

#### 1. Sample

Isolate the test samples soon after collecting, analyze immediately or store at 4°C for up to 5 days. Otherwise, store at -20°C for up to one month or -80°C for up to two months to avoid loss of bioactivity. Avoid multiple freeze-thaw cycles.

- **Serum:** Samples should be collected into a serum separator tube. Coagulate the serum by leaving the tube undisturbed in a vertical position overnight at 4°C or at room temperature for up to 60 minutes. Centrifuge at approximately 1000 × g for 20 min. Analyze the serum immediately or aliquot and store at -20°C or -80°C.
- **Plasma:** Collect plasma using heparin or EDTA as an anticoagulant. Centrifuge for 15 minutes at 1000 × g within 30 minutes of collection. Assay immediately or aliquot and store at -20°C. Avoid hemolysis and high cholesterol samples.
- **Other biological fluids:** Centrifuge at approximately 1000 × g for 20 min to remove precipitant. Analyze immediately or aliquot and store at -20°C or -80°C.

#### Note:


- » Please bring sample slowly to room temperature. Sample hemolysis will influence the result. Hemolyzed specimen should not be used.
- » Samples must be diluted so that the expected concentration falls within the kit's range. Sample should be diluted in 0.01 mol/L PBS (PH=7.0-7.2).
- » If the sample are not indicated in the manual's applications, a preliminary experiment to determine the validity of the kit will be necessary.
- » Fresh sample or recently obtained samples are recommended to prevent protein degradation and denaturalization that may lead to erroneous results.
- » Always use non-pyrogenic, endotoxin-free tubes for blood collection.

#### 2. Wash buffer

Dilute the concentrated Wash buffer 30-fold (1/30) with distilled water (i.e. add 20 ml of concentrated wash buffer into 580 ml of distilled water).

#### 3. Standard

Bring samples and all kit components to room temperature. Prepare the Standard with 0.5 ml of Standard Diluent buffer (kept for 10 min at room temperature) to make the 1000 pg/ml Standard Solution. Allow the reconstituted standard to sit for 10 minutes with gentle agitation prior to carrying out the serial dilutions; avoiding foaming or bubbles. Label 4 tubes with 333.33 pg/ml, 111.11 pg/ml, 37.04 pg/ml, 12.35 pg/ml. Aliquot 0.6 ml of the Standard diluent buffer into each tube. Add 0.3 ml of 1000 pg/ml standard solution into the 1st tube and mix thoroughly. Transfer 0.3 ml from 1st tube to 2nd tube, mix thoroughly, and so on.

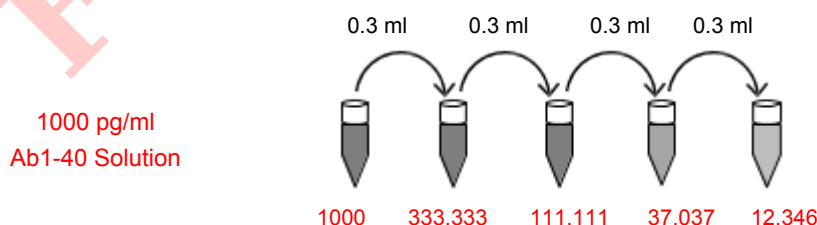

#### 4. Detection Reagent A and B Preparation

Reconstitute the Detection Reagent A with 150 µl of Reagent Diluent kept for 10 min at room temperature. Mix gently and avoid foaming or bubbles. Detection Reagent A and B should be diluted 100-fold with the Diluent A and B respectively and mixed thoroughly. They are sticky solutions, therefore pipette with a slow, smooth action to reduce volume errors. The solution should be prepared no more than 2 hours prior to the experiment. Please discard after use.

## B. Assay Procedure

Equilibrate the kit components and samples to room temperature before use. It is recommended to plot a standard curve for each test.

1. Set standard, test sample and control (zero) wells on the pre-coated plate and record their positions. It is recommended to measure each standard and sample in duplicate or triplicate.
2. Add 50 µl of the diluted standards into the standard wells. Aliquot 50 µl Standard Diluent Buffer to the control (zero) well.
3. Add 50 µl of appropriately diluted sample into the test sample wells. Add the solution at the bottom of each well without touching the side wall. Shake the plate mildly to mix thoroughly.
4. Immediately aliquot 50 µl of Detection Reagent A working solution (if it appears cloudy mix gently until the solution is uniform) to each well. Shake the plate gently to mix thoroughly (a microplate shaker is recommended).
5. Seal the plate with a cover and incubate for 1 h at 37°C.
6. Discard the solution and wash the plate 3 times with wash buffer. Do not let the wells dry completely at any time.

**Manual Washing:** Discard the solution without touching the side walls. Fill each well completely (approximately 400 µl) with Wash buffer and incubate on an ELISA shaker for 2 min. Invert the plate each time and decant the contents; tap it 4-5 times on absorbent paper towel to completely remove the liquid. Repeat this procedure for a total of three times.

**Automated Washing:** Discard the solution and wash the plate three times overfilling the wells with Wash buffer. After the final wash invert the plate, decant the contents; tap it 4-5 times on absorbent paper towel to completely remove the liquid. It is recommended that the washer be set for a soaking time of 1-2 min.

7. Aliquot 100 µl of Detection Reagent B working solution into each well, seal and incubate at 37°C for 30 min.
8. Repeat the aspiration/wash process 5 times as explained in step 6.
9. Aliquot 90 µl of TMB Substrate into each well. Seal the plate with a cover and incubate at 37°C for 10-20 min. Avoid exposure to light. The incubation time is for reference use only, the optimal time should be determined by end user. Do not exceed 30 min.
10. Add 50 µl of Stop solution into each well. There should be a color change to yellow. Gently tap the plate to ensure thorough mixing.
11. Ensure that there are no fingerprints or water on the bottom of the plate, and that the fluid in the wells is free of bubbles. Measure the absorbance at 450 nm immediately.

This assay is competitive, therefore there is an inverse correlation between Ab1-40 concentration in the sample and the absorbance measured. Create a graph with the log of the standard concentration (y-axis) and absorbance measured (x-axis). Apply a best fit trendline through the standard points. Use this graph calculate sample concentrations based on their OD values. If samples have been diluted, the concentration read from the standard curve must be multiplied by the dilution factor.

**Note:** If the samples measured were diluted, multiply the dilution factor by the concentrations from interpolation to obtain the concentration before dilution.

## Product Manual

Revision date: 05/Feb/2018

### C. Precautions

1. Before using the kit, centrifuge the tubes briefly to bring down the contents trapped in the lid.
2. Wash buffer may crystallize and separate. If this happens warm to room temperature and mix gently until the crystals are completely dissolved.
3. Avoid foaming or bubbles when mixing or reconstituting components. Prepare the Standard solutions within 15 min of starting the experiment. Please use the diluted Standard for a single assay procedure and discard after use. For each step in the procedure, total dispensing time for addition of reagents to the assay plate should not exceed 10 minutes.
4. It is recommended measuring each standard and sample in duplicate or triplicate.
5. Do not let the wells uncovered for extended periods between incubation. Once reagents are added to the wells, avoid letting the strips dry as this can inactivate the biological material on the plate. Incubation time and temperature must be controlled.
6. Ensure plates are properly sealed or covered during incubation steps.
7. Complete removal of all solutions and buffers during wash steps is necessary for accurate measurement readings.
8. Do not reuse pipette tips and tubes to avoid cross contamination.
9. Do not vortex the standard during reconstitution, as this will destabilize the protein. Once your standard has been reconstituted, it should be used right away. We do not recommend reusing the reconstituted standard.
10. The TMB Substrate solution is easily contaminated; work under sterile conditions when handling the TMB substrate solution. TMB Substrate solution should also be protected from light. Unreacted substrate should be colorless or very light yellow in appearance. Aspirate the dosage needed with sterilized tips and do not dump the residual solution back into the vial.

### D. Precision

Intra-assay Precision (Precision within an assay): 3 samples with low, medium and high levels of Ab1-40 were tested 20 times on one plate, respectively.

Inter-assay Precision (Precision between assays): 3 samples with low, medium and high levels of Ab1-40 were tested on 3 different plates, 8 replicates in each plate.

$$CV (\%) = (\text{Standard Deviation} / \text{mean}) \times 100$$

Intra-Assay: CV<10%

Inter-Assay: CV<12%