

# **PicoKine™ ELISA**

Catalog number: EK1243

For the quantitation of **Mouse Folr1** concentrations in cell culture supernatants, cell lysates, serum and plasma (heparin, EDTA).

This package insert must be read in its entirety before using this product. For research use only. Not for use in diagnostic procedures.



3942 B Valley Ave, Pleasanton, CA 94566

Phone: 888-466-3604 Fax: 925-215-2184 Email:support@bosterbio.com Web: www.bosterbio.com

# Mouse FOLR1/Alpha Fr ELISA Kit PicoKine™

Catalog Number: EK1243

# **Assay Principle**

The Boster Picokine™ Mouse Folr1 Pre-Coated ELISA (Enzyme-Linked Immunosorbent Assay) kit is a solid-phase immunoassay specially designed to measure Mouse Folr1 with a 96-well strip plate that is pre-coated with antibody specific for Folr1. The detection antibody is a biotinylated antibody specific for Folr1. The capture antibody is monoclonal antibody from rat, the detection antibody is polyclonal antibody from goat. The kit contains recombinant Mouse Folr1 with immunogen: Expression system for standard: E.coli; Immunogen sequence: T25-S232. The kit is analytically validated with ready-to-use reagents.

To measure Mouse Folr1, add standards and samples to the wells, then add the biotinylated detection antibody. Wash the wells with PBS or TBS buffer, and add Avidin-Biotin-Peroxidase Complex (ABC-HRP). Wash away the unbounded ABC-HRP with PBS or TBS buffer and add TMB. TMB is an HRP substrate and will be catalyzed to produce a blue color product, which changes into yellow after adding the acidic stop solution. The density of the yellow product is linearly proportional to Mouse Folr1 in the sample. Read the density of the yellow product in each well using a plate reader, and benchmark the sample wells' readings against the standard curve to determine the concentration of Mouse Folr1 in the sample. For more information on assay principle, protocols, and troubleshooting tips, see Boster's ELISA Resource Center at https://www.bosterbio.com/elisa-technical-resource-center.

#### **Overview**

Product Name	Mouse FOLR1/Alpha Fr ELISA Kit PicoKine™
Reactive Species	Mouse
Size	96wells/kit, with removable strips.
Description	Sandwich High Sensitivity ELISA kit for Quantitative Detection of Mouse FOLR1. 96wells/kit, with removable strips.
Sensitivity	<10pg/ml *The sensitivity or the minimum detectable dose (MDD) is the lower limit of the target protein that can be detected by the kit. It is determined by adding two standard deviations to the mean O.D. value of twenty (20) blank wells and calculating the corresponding concentration.
Detection Range	46.9pg/ml-3000pg/ml
Storage Instructions	Store at 4°C for 6 months, at -20°C for 12 months. Avoid multiple freeze-thaw cycles



#### **BOSTER BIOLOGICAL TECHNOLOGY**

3942 B Valley Ave, Pleasanton, CA 94566

Phone: 888-466-3604	Fax: 925-215-2184	Email:support@bosterbio.com	Web: www.bosterbio.com
	(Shipped with wet ice.)		
Uniprot ID	P35846		

### **Technical Details**

Capture/Detection Antibodies	The capture antibody is monoclonal antibody from rat, the detection antibody is polyclonal antibody from goat.
Specificity	Natural and recombinant Mouse Folr1
Immunogen	Expression system for standard: E.coli; Immunogen sequence: T25-S232
Cross Reactivity	This kit is for the detection of Mouse Folr1. No significant cross-reactivity or interference between Folr1 and its analogs was observed. This claim is limited by existing techniques therefore cross-reactivity may exist with untested analogs.

### **Preparations Before Assay**

Please read the following instructions before starting the experiment.

- 1. Read this manual in its entirety in order to minimize the chance of error.
- 2. Confirm that you have the appropriate non-supplied equipment available.
- 3. Confirm that the species, target antigen, and sensitivity of this kit are appropriate for your intended application.
- 4. Confirm that your samples have been prepared appropriately based upon recommendations (see Sample Preparation) and that you have sufficient sample volume for use in the assay.
- 5. When first using a kit, appropriate validation steps should be taken before using valuable samples. Confirm that the kit adequately detects the target antigen in your intended sample type(s) by running control samples.
- 6. If the concentration of target antigen within your samples is unknown, a preliminary experiment should be run using a control sample to determine the optimal sample dilution (see Sample Preparation).
- 7. To inspect the validity of experiment operation and the appropriateness of sample dilution proportion, a pilot experiment using standards and a small number of samples is recommended.
- 8. Before using the kit, spin tubes to bring down all components to the bottom of the tubes.
- 9. Don't let the 96-well plate dry out since this will inactivate active components on the plate.
- 10. Don't reuse tips and tubes to avoid-cross contamination.
- 11. Avoid using the reagents from different batches together.
- 12. The kit should not be used beyond the expiration date on the kit label. Any variation in diluent, operator, pipetting technique, washing technique, incubation time or temperature, and kit age can cause variation in binding. Variations in sample collection, processing, and storage may cause sample value differences.

# Kit Components/Materials Provided



3942 B Valley Ave, Pleasanton, CA 94566

Phone: 888-466-3604 Fax: 925-215-2184 Email:support@bosterbio.com Web: www.bosterbio.com

Description	Quantity	Volume	Storage of opened/reconstituted material
Anti-Mouse Folr1 Pre-coated 96-well Strip Microplate	1	12 strips of 8 wells	Return unused wells to the foil pouch. Reseal along the entire edge of the zip-seal. May be stored for up to 1 month at 4°C provided this is within the expiration date of the kit.
Mouse Folr1 Standard	2	10ng/tube	Discard the Folr1 stock solution after 12 hours at 4°C. May be stored at -20°C for 48 hours.
Mouse Folr1 Biotinylated Antibody (100x)	1	100 μΙ	May be stored for up to 1 month at 4°C provided this is within the
Avidin-Biotin-Peroxidase Complex (100x)	1	100 μΙ	expiration date of the kit.
Sample Diluent	1	30 ml	
Antibody Diluent	1	12 ml	
Avidin-Biotin-Peroxidase Diluent	1	12 ml	
Color Developing Reagent (TMB)	1	10 ml	
Stop Solution	1	10 ml	
Wash Buffer (25x)	1	20 ml	
Plate Sealers	4	Piece	

# **Required Materials That Are Not Supplied**

Microplate reader capable of reading absorbance at 450nm.

Automated plate washer (optional)

Pipettes and pipette tips capable of precisely dispensing 0.5 µl through 1 ml volumes of aqueous solutions.

Multichannel pipettes are recommended for a large numbers of samples.

Deionized or distilled water.

500ml graduated cylinders.

Test tubes for dilution.

Mouse FOLR1/Alpha Fr ELISA Kit PicoKine™ (EK1243) Standard Curve






Phone: 888-466-3604 Fax: 925-215-2184 Email:support@bosterbio.com Web: www.bosterbio.com

### **Example**

The highest O.D. value might be higher or lower than in the example. The experiment result is statistically significant if the highest O.D. value is no less than 1.0.

Concentra	ation0	46.9	94	188	375	750	1500	3000
(pg/ml)								
O.D.	0.032	0.087	0.134	0.235	0.409	0.722	1.329	2.210

#### Mouse FOLR1 PicoKine ELISA Kit standard curve

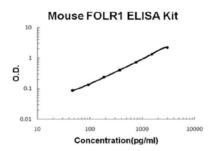

A standard curve is provided for demonstration only. A standard curve should be generated for each set of samples assayed.

# **Intra/Inter Assay Variability**

Boster spends great efforts in documenting lot-to-lot variability and ensuring our assay kits produce robust data that are reproducible.

Intra-Assay Precision (Precision within an assay): Three samples of known concentration were tested on one plate to assess intra-assay precision.

Inter-Assay Precision (Precision across assays): Three samples of known concentration were tested in separate assays to assess interassay precision.

Intra-Assay Precision				Inter-Assay Precision			
Sample	1	2	3	1	2	3	
n	16	16	16	24	24	24	
Mean(pg/ml)	102	398	1282	100	358	1344	
Standard deviation	5.4%1	21.49	67.94	5.3%	20.04	73.92	
CV(%)	5.5%	5.4%	5.3%	5.9%	5.6%	5.5%	



3942 B Valley Ave, Pleasanton, CA 94566

Phone: 888-466-3604 Fax: 925-215-2184 Email:support@bosterbio.com Web: www.bosterbio.com

# Reproducibility

To assay reproducibility, three samples with differing target protein concentrations were assayed using four different lots.

Lots	Lot1 (pg/ml)	Lot2 (pg/ml)	Lot3 (pg/ml)	Lot4 (pg/ml)	Mean (pg/ml)	Standard Deviation	CV (%)
Sample 1	102	96	88	100	96	5.36	5.5%
Sample 2	398	411	396	401	401	5.76	1.4%
Sample 3	1282	1443	1389	1334	1362	60.15	4.4%

<sup>\*</sup>number of samples for each test n=16.

# **Preparation Before The Experiment**

Item	Preparation
All reagents	Bring all reagents to room temperature (18-25°C) prior to use. Please DO NOT equilibrate unused plate well strips to room temperature. They should be sealed and stored in the original packaging. We recommend doing it at 37°C for best consistency with our QC results. Also, the TMB incubation time estimate (15-25 min) is based on incubation at 37°C.
Wash buffer	Prepare 500 ml of Working Wash Buffer by diluting the supplied 20 ml of Wash Buffer (25 x) with 480 ml of deionized or distilled water. If crystals have formed in the concentrate, warm to room temperature and mix it gently until crystals have completely dissolved.
Biotinylated Anti-Mouse Folr1 antibody	It is recommended to prepare this reagent immediately prior to use by diluting the Mouse Folr1 Biotinylated antibody (100x) 1:100 with Antibody Diluent. Prepare 100 µl by adding 1 µl of Biotinylated antibody (100x) to 99 µl of Antibody Diluent for each well. Mix gently and thoroughly and use within 2 hours of generation.
Avidin-Biotin-Peroxidase Complex	It is recommended to prepare this reagent immediately prior to use by diluting the Avidin-Biotin-Peroxidase Complex (100x) 1:100 with Avidin-Biotin-Peroxidase Diluent. Prepare 100 µl by adding 1 µl of Avidin-Biotin-Peroxidase Complex (100x) to 99 µl of Avidin-Biotin-Peroxidase Diluent for each well. Mix gently and thoroughly and use within 2 hours of generation.
Mouse Folr1 Standard	It is recommended that the standards be prepared no more than 2 hours prior to performing the experiment. Use one 10ng of lyophilized Mouse Folr1 standard for each experiment. Gently spin the vial prior to use. Reconstitute the standard to a stock concentration of 10ng/ml using 1ml of sample diluent. Allow the standard to sit for a minimum of 10 minutes with gentle agitation prior to making dilutions.
Microplate	The included microplate is coated with capture antibodies and is ready-to-use. It does not require



3942 B Valley Ave, Pleasanton, CA 94566

Phone: 888-466-3604 Fax: 925-215-2184 Email:support@bosterbio.com Web: www.bosterbio.com

additional washing or blocking. The unused well strips should be sealed and stored in the original packaging.

### **Dilution of Mouse Folr1 Standard**

- 1. Number tubes 1-8. Final Concentrations to be Tube # 1 –3000pg/ml, #2 –1500pg/ml, #3 750pg/ml, #4 375pg/ml, #5 187.5pg/ml, #6 93.75pg/ml, #7 46.875pg/ml, #8 Sample Diluent serves as the zero standard (0pg/ml).
- 2. To generate standard #1, add 300µl of the reconstituted standard stock solution of 10ng/ml and 700µl of sample diluent to tube #1 for a final volume of 1000µl. Mix thoroughly.
- 3. Add 300 µl of sample diluent to tubes # 2-7.
- 4. To generate standard #2, add 300 µl of standard #1 from tube #1 to tube #2 for a final volume of 600 µl. Mix thoroughly.
- 5. To generate standard #3, add 300 µl of standard #2 from tube #2 to tube #3 for a final volume of 600 µl. Mix thoroughly.
- 6. Continue the serial dilution for tube #4-7.

# **Sample Preparation and Storage**

These sample collection instructions and storage conditions are intended as a general guideline, and the sample stability has not been evaluated.

Sample Type	Procedure
Cell culture supernatants	Clear sample of particulates by centrifugation, assay immediately or store samples at -20°C.
Serum	Use a serum separator tube (SST) and allow serum to clot at room temperature for about four hours. Then, centrifuge for 15 min at approximately 1,000 x g. assay immediately or store samples at -20°C.
Plasma	Collect plasma using heparin or EDTA as an anticoagulant. Centrifuge for 15 min at approximately 1,000 x g. Assay immediately or store samples at -20°C.  *Note: it is important to not use anticoagulants other than the ones described above to treat plasma for other anticoagulants could block the antibody binding site.
Cell lysates	Lyse the cells, make sure there are no visible cell sediments. Centrifuge cell lysates at approximately 10000 X g for 5 min. Collect the supernatant.

## **Sample Collection Notes**

1. Boster recommends that samples are used immediately upon preparation.



3942 B Valley Ave, Pleasanton, CA 94566

Phone: 888-466-3604 Fax: 925-215-2184 Email:support@bosterbio.com Web: www.bosterbio.com

- 2. Avoid repeated freeze/thaw cycles for all samples.
- 3. In the event that a sample type not listed above is intended to be used with the kit, it is recommended that the customer conduct validation experiments in order to be confident in the results.
- 4. Due to chemical interference, the use of tissue or cell extraction samples prepared by chemical lysis buffers may result in inaccurate results.
- 5. Due to factors including cell viability, cell number, or sampling time, samples from cell culture supernatant may not be detected by the kit.
- 6. Samples should be brought to room temperature (18-25°C) before performing the assay without the use of extra heating.
- 7. Sample concentrations should be predicted before being used in the assay. If the sample concentration is not within the range of the standard curve, users must determine the optimal sample dilutions for their particular experiments.
- 8. Boster is responsible for the quality and performance of the kit components but is NOT responsible for the performance of customer supplied samples used with the kit.

### **Sample Dilution Guideline**

The user needs to estimate the concentration of the target protein in the sample and use an appropriate dilution factor so that the diluted target protein concentration falls in the range of O.D. values of the standard curve. Dilute the sample using provided diluent buffer. Pilot tests using a dilution series of each sample type are necessary. The sample must be mixed thoroughly with Sample Diluent.

### **Assay Protocol**

It is recommended that all reagents and materials be equilibrated to room temperature (18-25°C) prior to the experiment (see Preparation Before The Experiment, if you have missed this information).

- 1. Prepare all reagents and working standards as directed previously.
- 2. Remove excess microplate strips from the plate frame and seal and store them in the original packaging.
- 3. Add 100 µl of the standard, samples, or control per well. Add 100 µl of the **Sample Diluent** into the zero well. At least two replicates of each standard, sample, or control is recommended.
- 4. Cover with the plate sealer provided and incubate for 120 minutes at room temperature (or 90 min. at 37 °C).
- 5. Remove the cover and discard the liquid in the wells into an appropriate waste receptacle. Invert the plate on the benchtop onto a paper towel and tap the plate to gently blot any remaining liquid. It is recommended that the wells are not allowed to completely dry at any time.
- 6. Add 100 µl of the prepared 1x Biotinylated Anti-Mouse Folr1 antibody to each well.
- 7. Cover with a plate sealer and incubate for 90 minutes at room temperature (or 60 minutes at 37°C).
- 8. Wash the plate 3 times with the 1x wash buffer:
- a. Discard the liquid in the wells into an appropriate waste receptacle. Then, invert the plate on the benchtop onto a paper towel and tap the plate to gently blot any remaining liquid. It is recommended that the wells are not allowed to completely dry at any time.
- b. Add 300 µl of the 1x wash buffer to each assay well. (For cleaner background incubate for 60 seconds between each wash).
- c. Repeat steps a-b 2 additional times.
- 9. Add 100 μl of the prepared **1x Avidin-Biotin-Peroxidase Complex** into each well. Cover with the plate sealer provided and incubate for 40 minutes at RT (or 30 minutes at 37°C).
- 10. Wash the plate 5 times with the 1x wash buffer:
- a. Discard the liquid in the wells into an appropriate waste receptacle. Then, invert the plate on the benchtop onto a paper towel and tap the plate to gently blot any remaining liquid. It is recommended that the wells are not allowed to completely dry at any time.



3942 B Valley Ave, Pleasanton, CA 94566

Phone: 888-466-3604 Fax: 925-215-2184 Email:support@bosterbio.com Web: www.bosterbio.com

- b. Add 300 µl of the 1x wash buffer to each assay well. (For cleaner background incubate for 60 seconds between each wash).
- c. Repeat steps a-b 4 additional times.
- 11. Add 90 µl of **Color Developing Reagent** to each well. Cover with the plate sealer provided and incubate in the dark for 30 minutes at RT (or 15-25 minutes at 37°C). (The optimal incubation time must be empirically determined. A guideline to look for is blue shading the top four standard wells, while the remaining standards remain clear.)
- 12. Add 100 µl of **Stop Solution** to each well. The color should immediately change to yellow.
- 13. Within 30 minutes of stopping the reaction, the O.D. absorbance should be read with a microplate reader at 450nm.

### **Assay Protocol Notes**

- 1. Solutions: To avoid cross-contamination, change pipette tips between additions of each standard, between sample additions, and between reagent additions. Also, use separate reservoirs for each reagent.
- 2. Applying Solutions: All solutions should be added to the bottom of the ELISA plate well. Avoid touching the inside wall of the well. Avoid foaming when possible.
- 3. Assay Timing: The interval between adding samples to the first and last wells should be minimized. Delays will increase the incubation time differential between wells, which will significantly affect the experimental accuracy and repeatability. For each step in the procedure, total dispensing time for addition of reagents or samples should not exceed 10 minutes.
- 4. Incubation: To prevent evaporation and ensure accurate results, proper adhesion of plate sealers during incubation steps is necessary. Do not allow wells to sit uncovered for extended periods of time between incubation steps. Do not let wells dry out at any time during the assay. Strictly observe the recommended incubation times and temperatures.
- 5. Washing: Proper washing procedure is critical. Insufficient washing will result in poor precision and falsely elevated absorbance readings. Residual liquid in the reaction wells should be patted dry against absorbent paper during the washing process. Do not put absorbent paper directly into the reaction wells.
- 6. Controlling Substrate Reaction Time: After the addition of the TMB Substrate, periodically monitor the color development. Stop color development before the color becomes too deep by adding Stop Solution. The excessively strong color will result in inaccurate absorbance readings.
- 7. Reading: The microplate reader should be preheated and programmed prior to use. Prior to taking OD readings, remove any residual liquid or fingerprints from the underside of the plate and confirm that there are no bubbles in the wells.
- 8. Reaction Time Control: Control reaction time should be strictly followed as outlined.
- 9. Stop Solution: The Stop Solution contains an acid, therefore proper precautions should be taken during its use, such as protection of the eyes, hands, face, and clothing.
- 10. To minimize the external influence on the assay performance, operational procedures and lab conditions (such as room temperature, humidity, incubator temperature) should be strictly controlled. It is also strongly suggested that the whole assay is performed by the same operator from the beginning to the end.

# **Data Analysis**

Average the duplicate readings for each standard, sample, and control. Subtract the average zero standard O.D. reading.

It is recommended that a standard curve be created using computer software to generate a four-parameter logistic (4-PL) curve-fit. A free



3942 B Valley Ave, Pleasanton, CA 94566

Phone: 888-466-3604 Fax: 925-215-2184 Email:support@bosterbio.com Web: www.bosterbio.com

program capable of generating a four-parameter logistic (4-PL) curve-fit can be found online at: www.myassays.com/four-parameter-logistic-curve.assay.

Alternatively, plot the mean absorbance for each standard against the concentration. The measured concentration in the sample can be interpolated by using linear regression of each average relative OD against the standard curve generated using curve fitting software. This will generate an adequate but less precise fit of the data.

For diluted samples, the concentration reading from the standard curve must be multiplied by the dilution factor.

### **Background on Folr1**

Folate receptor 1 adult is a protein that in humans is encoded by the FOLR1 gene. The protein encoded by this gene is a member of the folate receptor (FOLR) family. It is mapped to 11q13.4. FOLR1 expression in Jurkat cells facilitated MBG or EBO entry, and FR-blocking reagents inhibited infection of MBG or EBO. This gene product is a secreted protein that either anchors to membranes via a glycosyl-phosphatidylinositol linkage or exists in a soluble form. The FOLR1 gene encodes the adult folate receptor, or folate-binding protein (FBP), which has a high affinity for folic acid and for several reduced folic acid derivatives, and mediates delivery of 5-methyltetrahydrofolate to the interior of cells. FOLR1 is also an important regulator of milk protein synthesis.

### Submit a product review to Biocompare.com





Submit a review of this product to Biocompare.com to receive a \$20 Amazon giftcard! Your reviews help your fellow scientists make the right decisions. Thank you for your contribution.