## RayBio<sup>®</sup> Cell-Based

### Human/Rat/Mouse\* p53(S15) Phosphorylation ELISA Kit

\* Mouse P53 phosphorylated at S18

For the semi-quantitative detection of phosphorylated human or rat p53 (S15) and mouse p53 at (S18) and total p53 in adherent whole cell lines.

# User Manual (Revised May 13, 2016)

Cat#: CBEL-P53-1 (1 plate kit)

Cat#: CBEL-P53-2 (2 plate kit)

Cat#: CBEL-P53-5 (5 plate kit)

5 plate kit = 3 total boxes (2 x 2 plate kits & 1 x 1 plate kit)

Please read manual carefully before starting experiment



Tel: (Toll Free) 1-888-494-8555 or +1-770-729-2992; Fax: +1-770-206-2393; Website: www.raybiotech.com Email: info@raybiotech.com



# Cell-Based Human/Rat/Mouse\* p53(S15) Phosphorylation ELISA Kit

## **TABLE OF CONTENTS**

I.	Introduction	2
II.	How It Works	3
III.	Reagents and Storage	4
IV.	Additional Reagents Required	4
V.	Reagent Preparation	5
VI.	Assay Procedure	6
VII.	Assay Procedure Summary	9
√III.	Quality Control Data	10
IX.	Troubleshooting Guide	12

### I. INTRODUCTION

Protein phosphorylation is instrumental in the regulation of protein activity within a cell. It plays important roles in the living cells including proliferation, differentiation and metabolism. A large number of protein kinases and phosphatases have been extensively investigated, and have been shown to be involved in signal transduction pathways.

The RayBio® Cell-Based Human/Rat/Mouse\* p53 (S15) ELISA kit is a very rapid, convenient and sensitive assay kit that can monitor the activation or function of important biological pathways in cells. It can be used for measuring the relative amount of p53 (S15) phosphorylation (Mouse p53 phosphorylated at S18) and screening the effects of various treatments, inhibitors (such as siRNA or chemicals), or activators in cultured human, mouse and rat cell lines. By determining p53 protein phosphorylation in your experimental model system, you can verify pathway activation in your cell lines without spending excess time and effort in preparing cell lysate and performing an analysis of Western Blot. In the Cell-Based p53 (S15) ELISA kit, cells are seeded into a 96 well tissue culture plate. The cells are fixed after various treatments, inhibitors or activators. After blocking, Anti-Phospho-p53 (S15) or Anti-p53 is pipetted into the wells and incubated. The wells are washed, and HRP-conjugated anti-rabbit IgG and HRP-Conjugated Streptavidin is added to the corresponding wells. The wells are washed again, a TMB substrate solution is added to the wells and color develops in proportion to the amount of protein. The Stop Solution changes the color from blue to yellow, and the intensity of the color is measured at 450 nm.

See Figure 1 below for an illustration.

### **II. HOW IT WORKS**

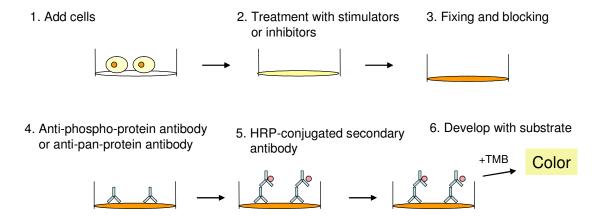


Fig.1. Cell-Based protein phosphorylation procedure

### **III. REAGENTS AND STORAGE**

# Store entire kit at ≤ -20 °C immediately upon arrival. Kit must be used within the 6 month expiration date. Avoid repeated freeze-thaw cycles.

ITEM	COMPONENT	1 PLATE KIT	2 PLATE KIT	STORAGE AFTER INITIAL THAW*	
Α	Uncoated 96-Well Microplate	1 plate	2 plates	Room Temperature	
В	20X Wash Buffer A Concentrate	1 vial (30 ml)		2-8℃	
С	20X Wash Buffer B Concentrate	1 vial (30 ml)			
D	Fixing Solution	1 vial (30 ml)			
Е	30X Quenching Buffer Concentrate	1 vial (2 ml)			
F	5X Blocking Buffer Concentrate	1 vial (20 ml)		2-8°C(1 month)	
G	500X Rabbit Anti-phospho (S15) p53	1 viol /1 (v.l)	1 viol (14 v.l) 2 viols (14 v.l/co)		
G	Concentrate	1 viai (14µi)	2 vials (14µl/ea)		
Н	1000x Biotinylated Anti-p53	1 , ial /7, .l \	1 vial (7 vl.)	1 vial (7 vl) 2 vials (7 vl/ca)	
П	Concentrate	1 vial (7μl )	2 vials (7μl/ea)	-20℃	
1.1	1000X HRP Conjugated	1 vial (10 µl )	1 vial (10 v.l.)	2 vials (10 ul/oa)	-20 C
I-1	Anti-Rabbit IgG Concentrate		2 vials (10 µl/ea)		
I-3	300x HRP Conjugated Streptavidin	1 vial (200 μl ) 1 vial (200 μl/ea)	1 vial (200 ul.)	1 vial (200 ul/oa)	
	Concentrate				
J	TMB Substrate	1 vial (12 ml)	2 vials (12 ml/ea)	2-8℃	
K	Stop Solution**	1 vial (14 ml)		2-0 C	

<sup>\*</sup>For up to 3 months (unless otherwise stated) or until expiration date.

### III. ADDITIONAL MATERIALS REQUIRED

- 1. A model cell line, protein tyrosine kinase inhibitors, growth factors or cytokines
- 2. Microplate reader capable of measuring absorbance at 450 nm
- 3. 37°C incubator
- 4. Precision pipettes to deliver 2 μl to 1 ml volumes
- 5. Adjustable 1-25 ml pipettes for reagent preparation
- 6. 100 ml and 1 liter graduated cylinders
- 7. Absorbent paper
- 8. Distilled or deionized water
- 9. Orbital shaker or oscillating rocker

<sup>\*\*</sup>Contains 0.2 M Sulfuric Acid

### **IV. REAGENT PREPARATION**

**NOTE:** Thaw all reagents to room temperature immediately before use. If wash buffers contain

visible crystals, warm to room temperature and mix gently until dissolved.

**NOTE:** Briefly centrifuge (~1,000g) ITEMS G, H, I, and J before opening to ensure maximum

recovery.

	ITEM	COMPONENT	PREPARATION	EXAMPLE	
	Α	Uncoated 96-Well Microplate	No Preparation	N/A	
_	В	20X Wash Buffer A Concentrate	Dilute <b>each</b> 20-fold with distilled	25 ml of concentrate + 475 ml of water = 500 ml of 1X working solution	
	С	20X Wash Buffer B Concentrate	or deionized water		
	D	Fixing Solution	No Preparation	N/A	
	E	30X Quenching Buffer Concentrate	Dilute 30-fold with 1X Wash Buffer A	1 ml of concentrate + 29 ml of wash buffer = 30 ml of 1X working solution	
-	F	5X Blocking Buffer Concentrate	Dilute 5-fold with distilled or deionized water	20 ml of concentrate + 80 ml of water = 100 ml of 1X working solution	
PRIMARY ANTIBODY	G	500X Rabbit Anti-phospho (S15) p53 Concentrate	Dilute 500-fold with 1X Blocking Buffer	14μl of concentrate+6986 μl of 1X Blocking Buffer=7ml of 1X working solution	
PRIMARY	Н	1000x Biotinylated Anti-p53 Concentrate	Dilute 1000-fold with 1X Blocking Buffer	7ul of concentrate+ 6993ul of 1X Blocking Buffer = 7ml of 1x working solution	
SECONDARY ANTIBODY	I-1	1000X HRP Conjugated Anti-Rabbit IgG Concentrate	Dilute 1000-fold with 1X Blocking Buffer	10 μl of concentrate + 9990 μl of 1X Blocking Buffer = 10 ml of 1X working solution	
	I-3	300x HRP Conjugated Streptavidin Concentrate	Dilute 300-fold with 1X Blocking Buffer	23ul of concentrate+ 6987ul of 1X Blocking Buffer = 7ml of 1x working solution	
	J	TMB Substrate	No Preparation	N/A	
	K	Stop Solution	No Freparation	17/4	

### **V. ASSAY PROCEDURE:**

**NOTE:** <u>ALL</u> incubations and wash steps must be performed under <u>gentle</u> rocking or rotation (~1-2 cycles/sec).

1. Design your experiment. For example, see Figure 2 below.

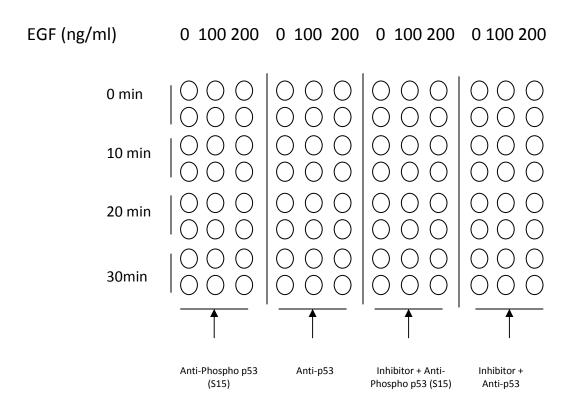


Fig. 2. Example of plate layout for RayBio® cell-based assay

OPTIONAL: If seeding HUVECs, HMEC-1 or other loosely attached cells, coat the Uncoated 96-Well Microplate (ITEM A) by adding 100 μl poly-L-Lysine (Recommended Sigma Aldrich, Cat#: P4832) into each well and then follow manufacturer's instructions. A pre-coated CellBIND® microplate or other poly-lysine treated tissue culture plate may be used in place of Item A.

2. Seed 100  $\mu$ l of 30,000 cells into each well of the Uncoated 96-Well Microplate (ITEM A) provided and incubate overnight at 37°C with 5% CO<sub>2</sub>.

**NOTE:** The optimal cell number used will vary on the cell line and the relative amount of protein phosphorylation. More or less cells may be used but this must be determined empirically.

**NOTE:** The cells can be starved ~4-24 hours (depending on cell line) prior to treatment with inhibitors or activators.

3. Apply various treatments, inhibitors (such as siRNA or chemicals) or activators according to manufacturer's instructions and incubate for the desired time points.

**NOTE:** It is recommended to dissolve inhibitors or activators into serum-free cell culture medium before treating the cells (unless otherwise stated in the manufacturer's instructions.)

- 4. Discard the cell culture medium by flipping the microplate upside down and **gently** tapping the bottom of the microplate over a sink.
- 5. Wash by pipetting 200 μl of the **prepared 1X** Wash Buffer A (ITEM B) into each well. Discard the wash buffer (same as step 4) and wash 2 more times for a total of 3 washes using fresh wash buffer each time. After the final wash, gently blot the microplate onto a paper towel to remove any excess/remaining buffer.

**NOTE:** To avoid cell loss, do not pipette directly onto the cells. Instead, gently dispense the liquid down the wall of cell culture wells. Also avoid the use of vacuum suction or too forcefully tapping the microplate when discarding any solution.

6. Add 100  $\mu$ l of Fixing Solution (ITEM D) into each well and incubate for 20 minutes at room temperature.

**NOTE:** The fixing solution is used to permeabilize the cells.

7. Repeat wash step 5.

8. Add 200  $\mu$ l of the **prepared 1X** Quenching Buffer (ITEM E) into each well and incubate 20 minutes at room temperature.

**NOTE:** The quenching buffer is used to minimize the background response.

- 9. Wash 4 times with 1X Wash Buffer A.
- 10. Add 200  $\mu$ l of the **prepared 1X** Blocking Buffer (ITEM F) into each well and incubate for 1 hour at 37°C.
- 11. Wash 3 times with the prepared 1X Wash Buffer B (ITEM C).

**NOTE:** If needed, the microplate may be stored at  $-80^{\circ}$ C for several days after this wash.

- 12. Add 50 µl of the **prepared 1X** primary antibody (ITEM G or H) into each corresponding well and incubate for 2 hours at room temperature.
- 13. Wash 4 times with 1X Wash Buffer B.
- 14. Add 50 µl of **1X HRP Conjugated Streptavidin** (ITEM I-3) against **Biotinlyated Anti-p53** (ITEM H), and **1x HRP Conjugated Anti-Rabbit IgG** (ITEM I-1) against **Rabbit Anti-phospho (S15) p53** (ITEM G) into corresponding wells and incubate for 1 hour at room temperature.
- 15. Wash 4 times with 1X Wash Buffer B.
- 16. Add 100  $\mu$ l of the TMB Substrate (ITEM J) into each well and incubate for 30 minutes at room temperature **in the dark**.
- 17. Add 50  $\mu$ l of the Stop Solution (ITEM K) into each well. Read at 450 nm immediately.

### VI. ASSAY PROCEDURE SUMMARY

1. Seed 30,000 cells into each well and incubate overnight.

 $\prod$ 

2. Apply various treatment, inhibitors or activators according to manufacturer's instructions.

 $\prod$ 

3. Add 100  $\mu$ l of Fixing Solution into each well and incubate for 20 minutes at room temperature.

 $\prod$ 

4. Add 200 µl of prepared 1X Quenching Buffer and incubate for 20 minutes at room temperature.

 $\int$ 

5. Add 200  $\mu$ l of prepared 1X Blocking Buffer and incubate for 1 hour at  $37^{\circ}$ C.

 $\prod$ 

6. Add 50  $\mu$ l of prepared 1X primary antibody to each well and incubate for 2 hours at room temperature.



7. Add 50  $\mu$ l of prepared 1X HRP Conjugated secondary antibody and incubate for 1 hour at room temperature.



8. Add 100  $\mu$ l TMB Substrate and incubate 30 minutes at room temperature.



9. Add 50  $\mu$ l Stop Solution to each well. Read at 450 nm immediately.

### **VII. QUALITY CONTROL DATA**

### Representative results of Cell-Based p53(S15) are shown below:

- 1. Seeded 30,000 T47D cells into appropriate wells of the microplate. Cells were incubated at 37°C in 5% CO<sub>2</sub> overnight.
- 2. Introduce UV irradiation at 300 J/m<sup>2</sup> to appropriate wells without cover or media (shown below). Then reintroduce media and incubated for 4 hours at 37°C.
- 3. Discarded the solution and wash 3 times with 1X Wash Buffer A (200  $\mu$ l each) immediately. Then flipped the plate upside down and tapped to remove all of excess wash buffer. The protocol was then followed as stated.

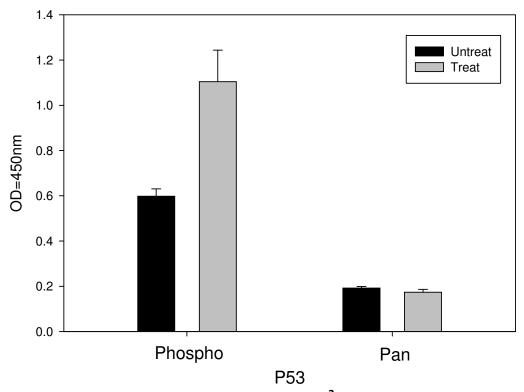


Fig. 3. T47D cells were stimulated by 300J/m<sup>2</sup> of UV radiation then incubated for 4 hours at 37°C

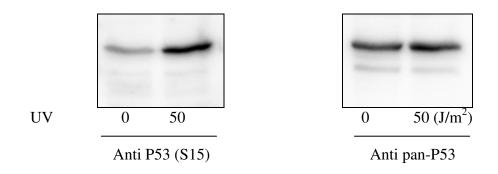


Fig. 4. T47D cells were treated or untreated with 50 J/m<sup>2</sup> UV. Cell lysates were analyzed using Western Blot.

### **IX: TROUBLESHOOTING GUIDE**

Problem	Cause	Solution
1. Low signal	1. Improper storage of the ELISA kit	<ol> <li>Store the kit according to manual instructions. Keep substrate solution in dark.</li> </ol>
	2. Improper dilution	<ol><li>Ensure correct preparation of antibody and reagents.</li></ol>
	3. Cells drop off from the wells	<ol> <li>Some of treatments may make cells drop off the wells. Reduce inhibitor or activator concentration.</li> </ol>
2. High background	1. Inadequate washing	<ol> <li>Be sure to remove         all of washing         solution and follow         the recommendation         for washing.</li> </ol>
	2. Too much cells	<ol><li>Reduce the cell number.</li></ol>
3. Large CV	1. Inaccurate pipetting	1. Check pipette.
	2. Remaining wash buffer in the well	<ul><li>2. Remove all of wash buffer.</li><li>3. Please don't directly face</li></ul>
	3. Cells drop off from the wells	the cells with tips when adding reagents or wash buffer.

This product is for research use only.



©2016 RayBiotech, Inc.